

CASITA® 10 FT. TENT HALF WALL INSTRUCTIONS

PRODUCT CATEGORY: OUTDOOR BANNER STAND



Outer Rail

Center Rail Connector

Outer Rail

Tent Rail Assembly

1. Connect left and right outer rails with rail center connector. (Push spring buttons in before sliding rail center connector over outer rails to connect)

Half Wall and Rail Installation

1. Set up tent
2. Assemble tent rail
3. Slide tent rail through top pole pocket of half wall
4. Attach rail clamps to tent legs
5. Connect ends of tent rails to rail clamps on tent legs
6. Insert screw knobs to secure tent rail and half wall
7. Adjust rail height to desired level before fully tightening screw knobs
8. Attach Velcro straps to tent legs to complete half wall installation